

We are Custom Chrome



Burly 'Adjust-A-Ride' Kits for Softail Models

Fully adjustable versions of the popular 'Lowboy' lowering kits which don't require any cutting, grinding, or irreversible modifications and can be installed in an hour. Permits the ride height to be adjusted up to 2" lower or raised from the stock height by 1/2" in minutes with a 3/4" wrench. They feature sealed heim joint bearings that require very little maintenance.

Fits all Softail Models from 84-88

Fit Original Equipment shocks only.

28477 Plain

Fits all Softail Models from 89-99

Also fit the 'American Tuned' gas shocks from Progressive Suspension, Inc.

28478 Plain




Shock Stud Lock Nuts

Lock nuts for shocks on FL models from 58-84, FX models from 71-86 and Sportster models from 54-78. Also used

as the rear brake drum brake anchor nut on FL models from 63-72 and FX models from 71-72 (5/8"-18 threads). Replaces OEM 7993.

220042 Sold in 10 pack

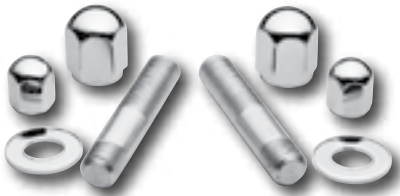

Shock Stud Kit for Big Twins


Contains two lower shock stud kits and chrome nuts for the upper studs. The studs are grade 5 and zinc-plated with a locking agent applied to provide you with a secure installation.

28176 Fits 4-speed Big Twins from 73-86

Rubber Shock Bushings

Rubber bushings for the shock mounting studs used from 58-72.

28088 Replaces OEM 385210-42A (bag of 10)

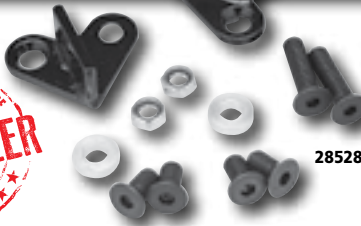

28528



'Burly' Rear Lowering Kits

Bolt-on shock mounts that move shock mounting

points further back and down, lowering the rear of your bike approximately 1" with no loss of wheel travel. Installation is easy, with no permanent modifications to your bike. All kits come with a black powdercoated finish and include instructions and all necessary hardware.

For Touring Models

640374 Fits all models from 02-08 (except FLHX and FLH RS)

641272 Fits all models from 09-Up (except FLHX, FLHXI, FLHRS models)

28528 Fits all models from 97-01 (except 98-01 Classic models), Black

28527 Fits all models from 97-01 (except 98-01 Classic models), Chrome

28479 Fits all models from 85-96, Black

28521 Fits all models from 85-96, Chrome

For Dyna Glide Models

640375 Fits 02-Up models

07912 Fits all models 00-01

07911 Fits all models from 91-99 (except FXDL and FXD Convertible with Original Equipment saddlebags), Black

28524 Fits all models from 91-99 (except FXDL and FXD Convertible with Original Equipment saddlebags), Chrome

For Sportster Models

640381 Fits all 05-Up models (except Low and Custom models)

688962 Fits all 04 models (except Custom and Hugger models)

07898 Fits all models from 00-03 (except Custom and Hugger models)

28522 Fits all models from 86-96 (except Custom and Hugger models)

Note: These lowering kits are not recommended to be installed on motorcycles equipped with lowered shocks. Lowering your motorcycle will reduce cornering clearance. This modification is intended for custom motorcycles. It is not recommended for motorcycles ridden on the streets or highways. All Burly lowering kits are made in the USA.



Ness-Tech Lowering Kits for Touring Models

- Gives your bike that sleek low-profile look.
- Lowers FLHT/FLTR models approximately 1".
- Supplied with mounting hardware and also designed to use factory hardware.

631165 Fits 02-08 Touring models

Note: These lowering kits are not recommended to be installed on motorcycles equipped with lowered shocks. Lowering your motorcycle reduces cornering clearance.



Chrome Lowering Kit for Twin Cam Softail Models

Adjustable mounts install on the Original Equipment and Progressive Suspension Softail shocks. Permits the bike to be lowered up to two full inches, improving the look by closing the gap between the tire and fender. Sold in pairs.

29806 Fits all Softail models from 00-Up



Chrome Shock Stud Kits

Kits include a chrome-plated stud, chrome washers, rubber bushings, spacer and chrome nuts. Sold each.

Upper Shock Stud Kits

28192 Fits 73-86 4-speed FL and FX models (repl. OEM 54515-73)

28179 Fits 67-72 FL and FX models (repl. OEM 54515-57)

28195 Fits 58-66 FL models (repl. OEM 54515-58A)

28193 Fits 56-74 Sportster and K models (repl. OEM 54515-56B)

Lower Shock Stud Kits

28191 Fits 67-72 FL and FX models (repl. OEM 54517-67)

28186 Fits 58-66 FL models (repl. OEM 54517-58)

633876 Fits 75-78 Sportster models

28194 Fits 56-74 Sportster and K models (repl. OEM 54516-72)

FORKS & SHOCKS

15