



Custom Chrome Engine and Cover Sets

These kits contain show-quality chrome-plated components in kits designed for specific applications by year and model. Most kits are available in chrome-plated knurled sockethead hardware, or with the head polished smooth before plating. Some kits may contain hex or button-head hardware where sockethead hardware is not appropriate. These kits add visual appeal with functional top-quality, American-made fasteners.

Complete Motor Kits for Sportster models

- 612348** Fits Sportster models from 04-14 - knurled
- 612349** Fits Sportster models from 04-14 - smooth

Side Cover Bolt Kits for Sportster models

- 612301** Fits Sportster models from 91-03 - knurled
- 612354** Fits Sportster models from 04-14 - knurled
- 612355** Fits Sportster models from 04-14 - smooth

Cam Cover Bolt Kits for Sportster models

- 612300** Fits Sportster models from 91-03 - knurled
- 612336** Fits Sportster models from 04-14 - knurled
- 612337** Fits Sportster models from 04-14 - smooth

Derby Cover Bolt Kit for Sportster models

- 612335** Fits Sportster models from 04-14

Point Cover Screw Set for Sportster models

- 612340** Fits Sportster models from 04-14

Lifter Block Bolt Kit for Sportster models

- 612338** Fits Sportster models from 04-14 - knurled
- 612339** Fits Sportster models from 04-14 - smooth

Rocker Box Sockethead Screw Set for Sportster models

- 36378** Fits Sportster models from 91-03 - knurled
- 36377** Fits Sportster models from 91-03 - smooth
- 612343** Fits Sportster models from 04-14 - knurled
- 612344** Fits Sportster models from 04-14 - smooth

Motor Mount Sockethead Screw Set for Sportster models (front upper and lower and top center mounts)

- 36372** Fits Sportster models from 91-03 - smooth
- 612341** Fits Sportster models from 04-14 - knurled
- 612342** Fits Sportster models from 04-14 - smooth

Motor Mounts for Sportster models

- 612303** Lower motor mount bolts for Sportster models from 91-03 - knurled
- 612304** Top center motor mount bolts for Sportster models from 91-03 - knurled

Case Bolts Kit for Sportster models

- 612331** Fits Sportster models from 04-14 - knurled
- 612332** Fits Sportster models from 04-14 - smooth

Miscellaneous Kits for Sportster Models

Fits Sportster models from 91-03 Rocker box sockethead screw set

- 36378** Smooth
- 36377** Knurled

Fits Sportster models from 91-03. Motor mount sockethead screw set; front upper and lower and top center mounts

- 36372** Smooth

Miscellaneous Kits for Big Twin Models

Fits 89-93 Motor mount set. Sockethead Dyna Glide models and hex head screws for top and bottom motor mounts

- 36384** Smooth
- 36383** Knurled

Fits 89-93 Softail Primary cover set. Sockethead and Dyna Glide model screws for derby, inspection, inner and outer primary

- 36382** Smooth
- 36381** Knurled

Fits 36-64 Primary cover set. Sockethead Big Twins screws

- 25079** Knurled

Fits 36-64 Derby and chain inspection Big Twins cover set


- 25095** Flat head screws

Fits Late 76-99 Lifter base set. Sockethead screws Big Twins

- 36366** Smooth

Fits 36-64 Cam cover set Big Twins

- 25080** Buttonhead screws

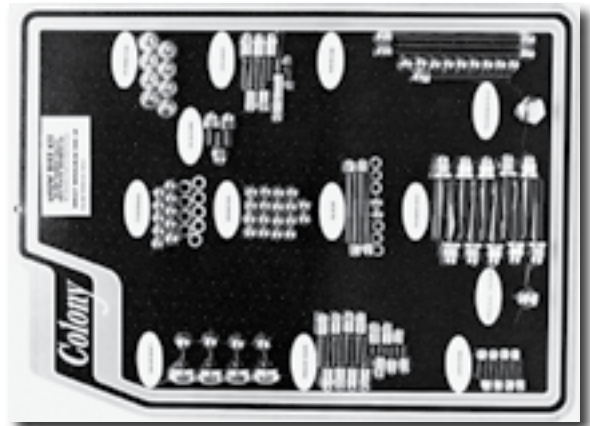

Colony Chrome Show Bike Kits

Acorn-style kits with all the necessary hardware to transform a stock engine into a classic.

- 36173** Fits Sportster models from 77-85
- 36174** Fits Panheads from 58-65
- 36262** Fits Shovelheads from 66-69
- 36261** Fits Shovelheads from 70-75
- 36330** Fits Shovelhead FLT and FLHT models from 80-83
- 36332** Fits 5-speed Evolution Big Twin models from 84-86

Chrome Rear Fender Strut Mounting Kits by Colony

Kits include everything necessary for mounting fender struts.

- 35165** For mounting four hole struts on Fat Boy and Heritage Softail models from 86-99 (repl. OEM 59969-86)
- 35164** For mounting six hole struts on Springer, Custom and Bad Boy models from 86-99 (repl. OEM59954-86)

