

**RÜCKLICHT-BLINKER-KOMBINATION**  
**FÜR HARLEY-DAVIDSON FXDR (2019- )**



## PACKLISTE:

Menge	Beschreibung
1	Rücklicht-Blinker-Träger
2	Einbaublinder
1	Rück-/Bremslicht
4	Senkkopfschrauben
4	Muttern
4	U-Scheiben
1	Blink-Frequenzgeber

## MONTAGEANLEITUNG:

**Warnung:** Niemals in die leuchtenden LED-Blinker schauen, andernfalls können Augenschäden verursacht werden!



Bauen Sie die Blinker und den Rücklichteinsatz aus dem Träger aus.

**Achtung:** Die kleinen Madenschrauben nicht komplett aus dem Träger schrauben, da diese sonst schwer auffindbar sind!

Halten Sie den Träger unter dem Heckteil an und zeichnen Sie die vier Befestigungspunkte am Kotflügel an. Zeichnen Sie außerdem die drei Kabeldurchführungsbohrungen an.

Demontieren Sie den Innenkotflügel.


Bohren Sie an den markierten Positionen 4mm-Löcher und schrauben Sie den Träger mit den beiliegenden Senkkopfschrauben sowie den Unterlegscheiben und Muttern an der korrekten Position an.

Bauen Sie Blinker und Rücklichteinsatz wieder in den Träger ein und führen Sie die Kabel dabei durch die drei Kabeldurchführungsbohrungen.



Montieren Sie den Innenkotflügel wieder am Fahrzeug.

Nehmen Sie den Sitz ab und schließen Sie die Blinker und das Rück-/Bremslicht am Kabelbaum an.

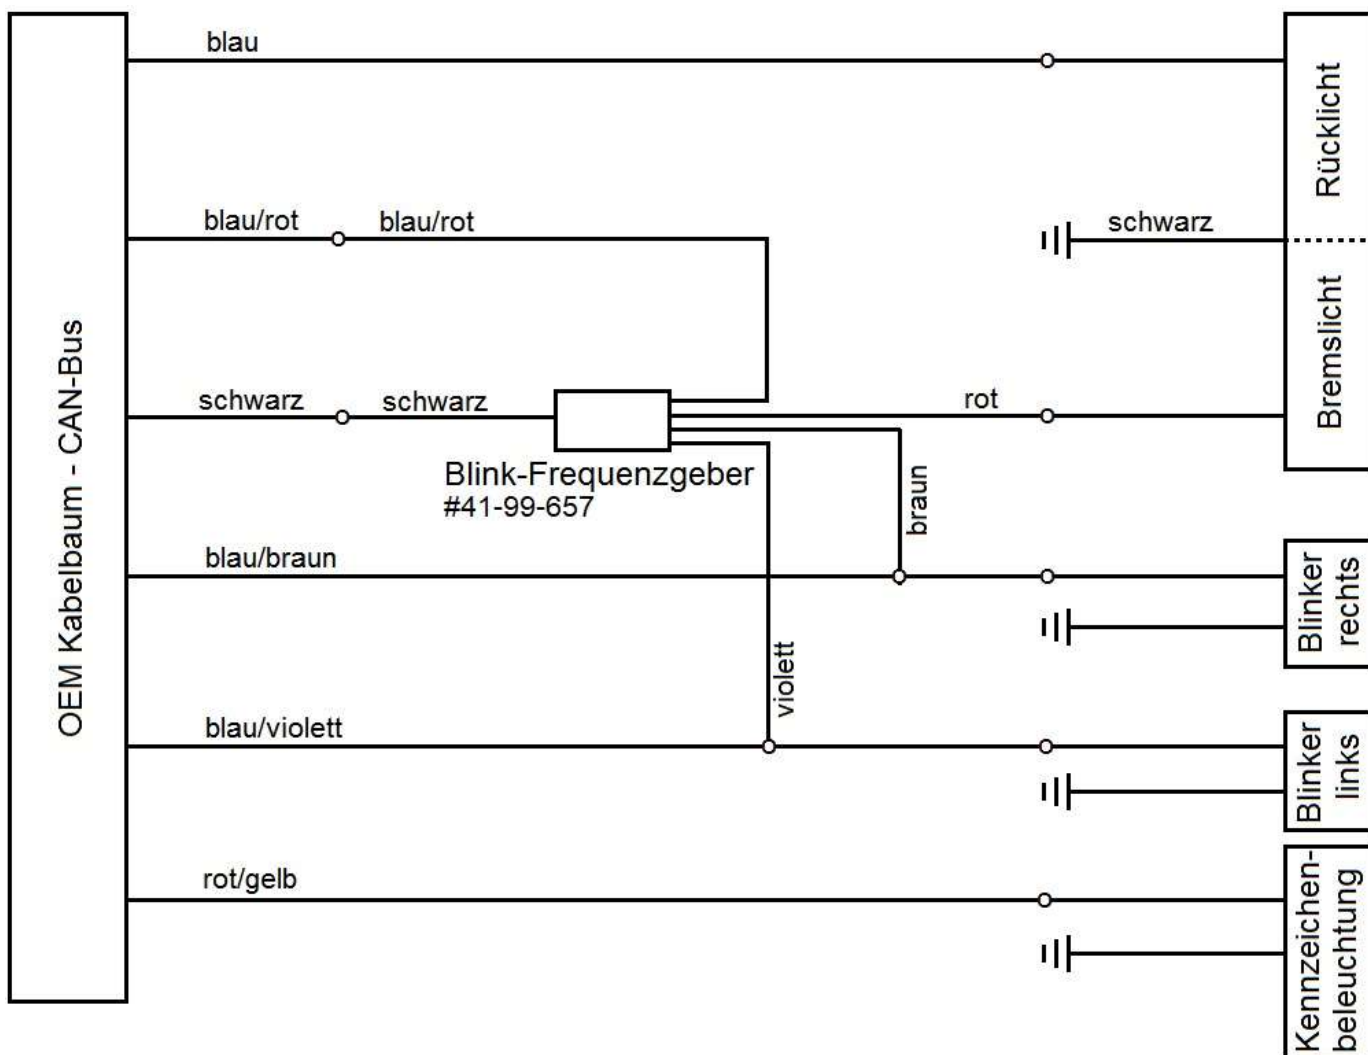

Achten Sie darauf, das Bremslicht wie im folgenden Schema anzuschließen, um Fehlfunktionen des ABS zu vermeiden!

Isolieren Sie die Kabelverbindungen ordnungsgemäß! Wenn möglich nutzen Sie dazu Schrumpfschlauch.

Überprüfen Sie die korrekte Funktion der Beleuchtungsanlage!

Das Thunderbike-Team wünscht viel Vergnügen.  
Gute Fahrt!



Thunderbike  
Güterstrasse 5  
D-46499 Hamminkeln  
Telefon(0049)2852 - 6777 -33  
Telefax(0049)2852 - 5444  
info@thunderbike.de

**TAILLIGHT TURNSIGNAL COMBINATION**  
**FOR HARLEY-DAVIDSON FXDR (2019- )**



## PACKING LIST:

amount	item
1	bracket
2	turn signal
1	tail-/brake light
4	flat head screw
4	nut
4	washer
1	load equalizer

## MOUNTING INSTRUCTIONS:

**Warning:** Don't look directly into the LED turn signals! Otherwise there will be an injury for your eyes!



Remove the turn signals and the tail-/brake light from the bracket.

**Attention:** Don't lose the little clamping screws!

Hold on the bracket to the rear section of your bike and mark the four mounting points. Mark the three cable feedthrough points additionally.

Remove the mud flap fender.


Drill 4mm borings at the marked positions into the fender and mount the bracket in the correct position using the included flat head screws, washers and nuts.

Install the turn signals and the tail-/brake light into the bracket and feed their cables through the borings.



Mount the mud flap fender to your bike.

Remove the seat and connect the lights to your OEM wiring.

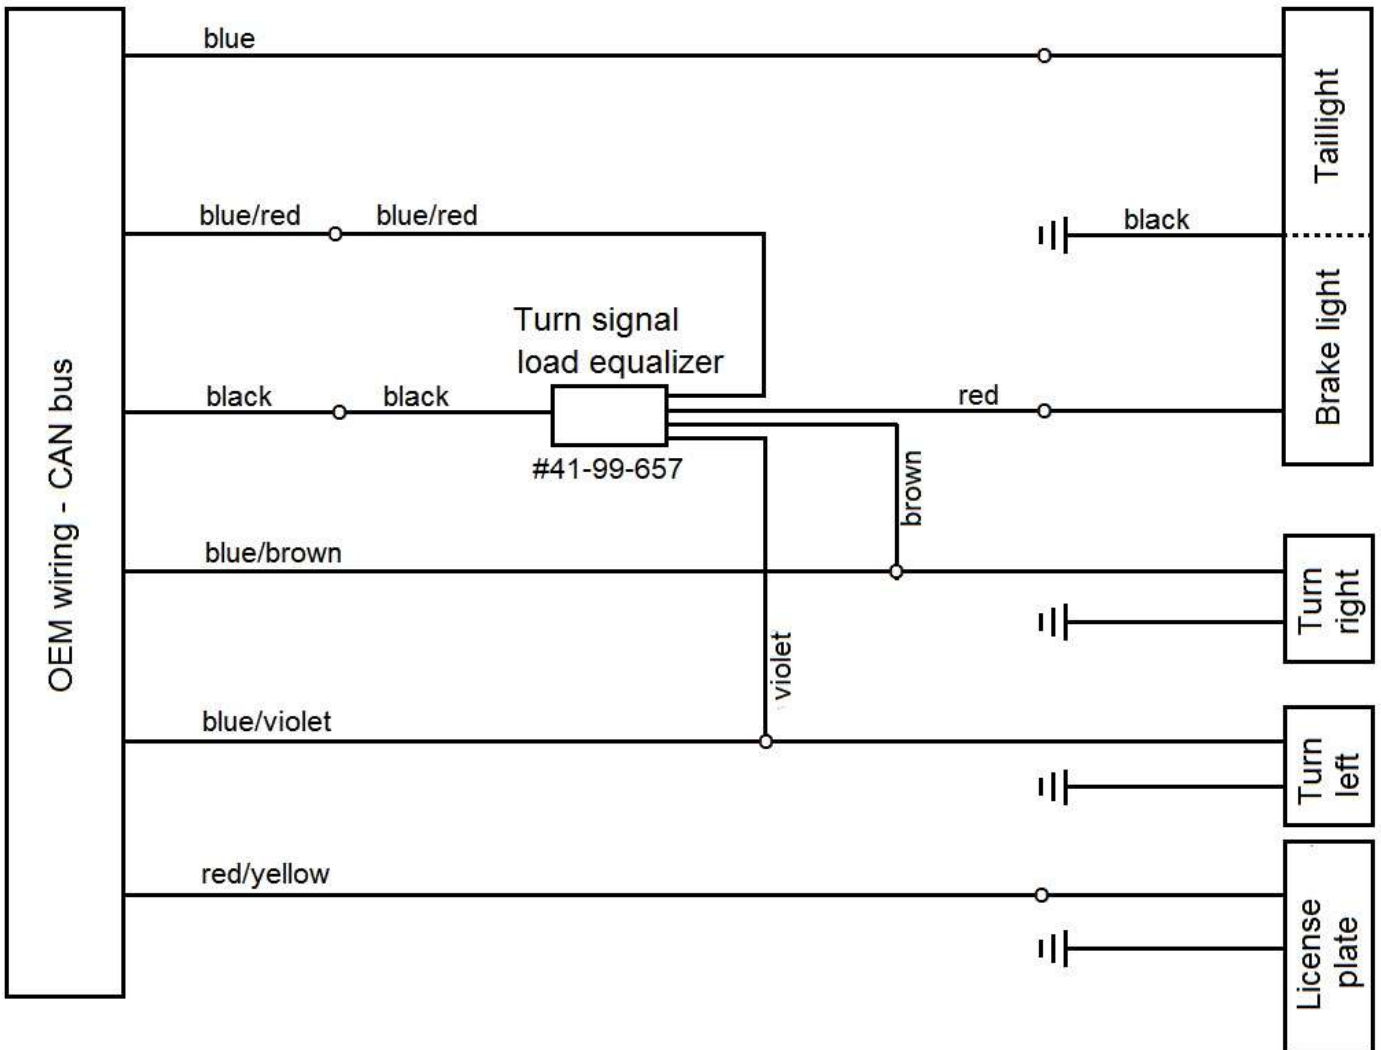

Make sure the brake light is connected like on the picture below! Otherwise there will be a fault with your ABS system.

Isolate the wiring connections thoroughly! Use heat shrink tubing if it is possible.

Check the function of your turn signals and tail-/ brake light!

Have fun with it!



Thunderbike  
Güterstrasse 5  
D-46499 Hamminkeln  
Telefon (0049) 2852 - 6777 - 33  
Telefax (0049) 2852 - 5444  
info@thunderbike.de