


**RISER „OLD STYLE“  
FÜR HARLEY-DAVIDSON MODELLE  
MIT SPRINGER-GABEL**



## PACKLISTE:

Menge	Beschreibung
2	Lenkerklemme
2	Riser-Adapter
2	Inbusschraube M12*22
2	U-Scheibe Ø12

## MONTAGEANLEITUNG:

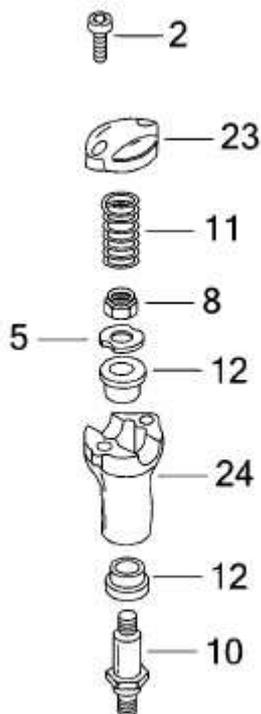


Lösen Sie die Klemmschrauben (2) und entfernen Sie das Riser-Oberteil (23).

Entfernen Sie auf der rechten Seite zusätzlich die Feder (11).

Lösen Sie die Mutter (8) und entfernen Sie die Scheibe (5), die Hülsen (12) und das Riser-Unterteil (24).

Schrauben Sie die Riser-Bolzen (10) aus der oberen Gabelbrücke heraus.

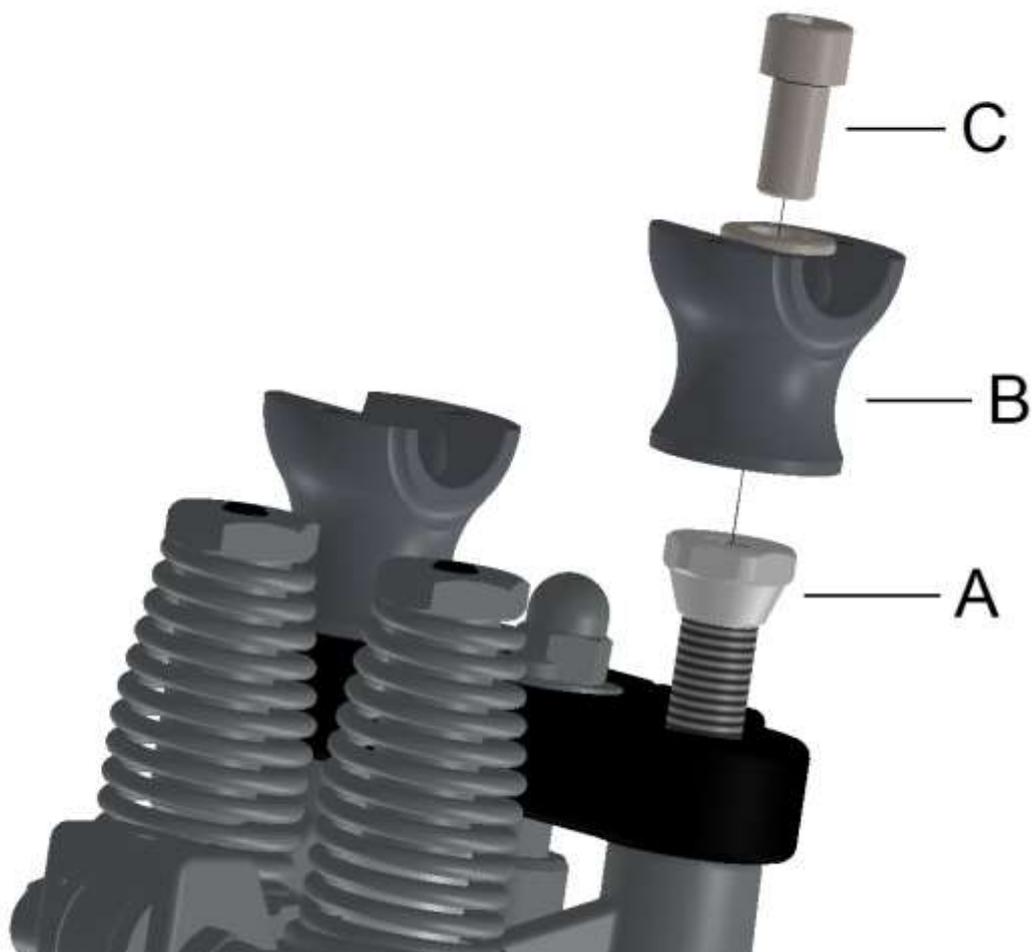

Schrauben Sie die beiliegenden Riser-Adapter (A) durch die obere Gabelbrücke in die Gabelholme und ziehen Sie die Adapter mit 81-88 Nm (60-65 ft-lbs) fest.

Befestigen Sie die neuen TB-Riser (B) mit den beiliegenden Inbusschrauben M12\*22 (C) und den Unterlegscheiben am Adapter. Ziehen Sie die Schrauben mit 85 Nm (63 ft-lbs) fest.

Montieren Sie den Lenker und ziehen Sie die Klemmschrauben der Riser mit 20 Nm (14,75 ft-lbs) fest.

Das Thunderbike-Team wünscht viel Vergnügen.  
Gute Fahrt!



Thunderbike  
Güterstrasse 5  
D-46499 Hamminkeln  
Telefon (0049) 2852 - 6777 -33  
Telefax (0049) 2852 - 5444  
info@thunderbike.de

**RISER „OLD STYLE“**


**FOR HARLEY-DAVIDSON MODELS  
WITH SPRINGER FRONT END**



**PACKING LIST:**

amount	item
2	Riser
2	Riser adapter
2	Allen head screw M12*22
2	Washer Ø12

**MOUNTING INSTRUCTIONS:**

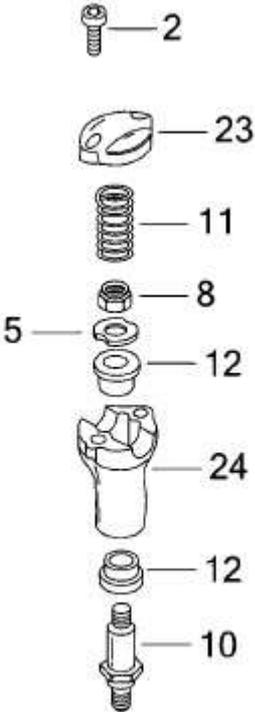


Loosen the clamping screws (2) and remove the upper parts of the OEM risers (23).

Also remove the spring (11) on the right riser.

Loosen the nuts (8) and remove the washers (5), the spacers (12) and the lower parts of the risers (24).

Remove the bolts (10) from your upper triple tree.

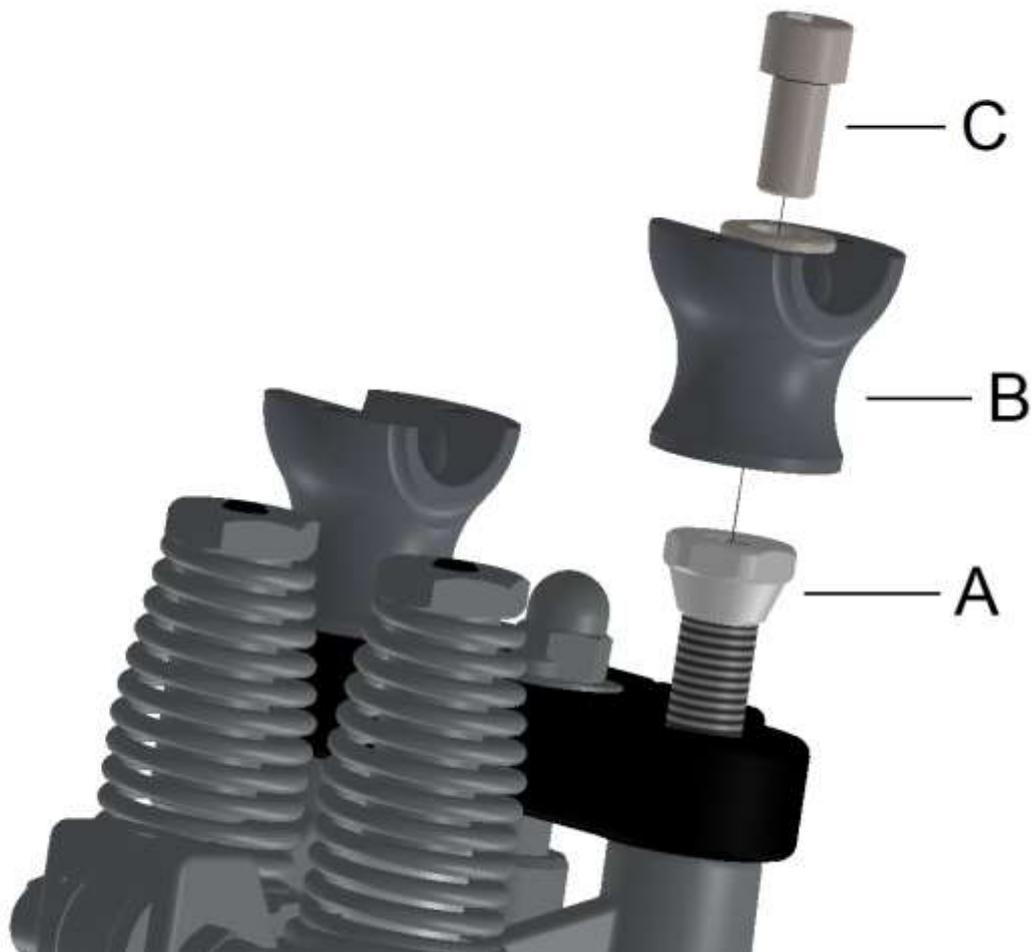

Mount the included adapter (A) to your upper triple tree and tighten it with 81-88 Nm (60-65 ft-lbs) torque.

Mount the new TB risers (B) to the adapters using the included Allen head screws M12\*22 (C) and the washers.  
Tighten the screws with 85 Nm (63 ft-lbs) torque.

Install the handlebar and tighten the clamping screws of the risers with 20 Nm (14,75 ft-lbs) torque.

The Thunderbike team wishes you fun with your new parts.  
Have a nice and safe ride!



Thunderbike  
Güterstrasse 5  
D-46499 Hamminkeln  
Telefon (0049) 2852 - 6777 - 33  
Telefax (0049) 2852 - 5444  
info@thunderbike.de