

GABELCOVER

FÜR HARLEY-DAVIDSON DYNA (2006-2017)



PACKLISTE:

Menge	Beschreibung
2	Gabelcover oben
3	Paßscheibe 26x36x1

MONTAGEANLEITUNG:

Lösen Sie die Klemmschrauben der Gabelbrücken (1) und ziehen Sie die Standrohre aus den Gabelbrücken heraus.

Wichtig: Achten Sie dabei darauf, Kabelverbindungen sowie Brems- und Kupplungsleitungen nicht zu beschädigen!!

Entfernen Sie die Kappe (4) und Mutter (6) der oberen Gabelbrücke (2) und nehmen diese ab.

Legen Sie die entsprechenden Paßscheiben zwischen Einstellmutter und oberer Gabelbrücke, sodass die Gabelcover zwischen die Gabelbrücken passen.

Achtung: Bei einigen Modellen mit konischer Einstellmutter müssen die Paßscheiben unter der Einstellmutter platziert werden!


Stellen Sie das Lenkkopflager gemäß den Herstellerangaben ein.

Montieren Sie die obere Gabelbrücke wieder.

Stecken Sie die Gabelcover zwischen die Gabelbrücken und schieben Sie die Standrohre wieder in ihre Ursprungsposition.

Ziehen Sie die Klemmschrauben gemäß Herstellerangaben fest.

Das Thunderbike-Team wünscht viel Vergnügen.
Gute Fahrt!

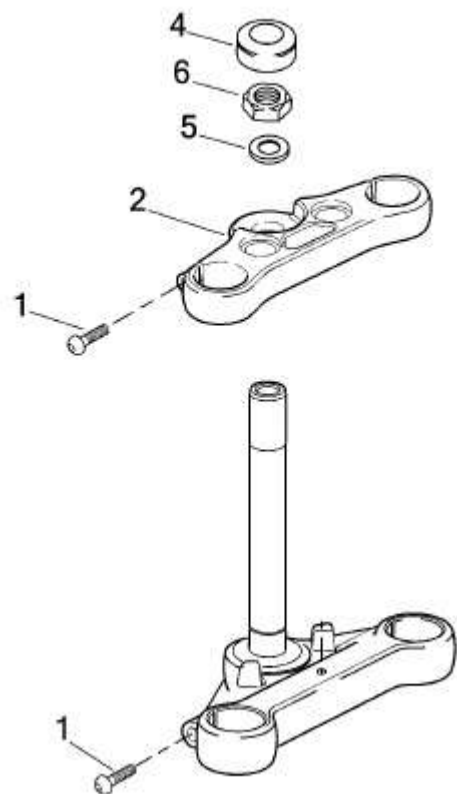

Thunderbike
Güterstraße 5
D-46499 Hamminkeln
Telefon(0049)2852 - 6777 -33
Telefax (0049)2852 - 5444
info@thunderbike.de

FORK COVER

FOR HARLEY-DAVIDSON DYNA (2006-2017)



PACKING LIST:

Amount	Item
2	Upper fork cover
3	Washer 26x36x1

MOUNTING INSTRUCTIONS:

Loosen the clamping screws (1) and pull off the fork pipes from the triple trees.

Important: Make sure there will be no damage to cable connections, brake lines or clutch cables!!

Remove the cap (4) and the nut (6) and remove the upper triple tree (2).
Insert the relevant washers between the bearing adjuster and the upper triple tree so that the fork covers will fit between the triple trees.

Attention: On some models with conical bearing adjuster the washers have to be placed underneath the adjuster nut!


Adjust the steering bearings according to the manufacture instructions.

Mount the upper triple tree again.

Insert the fork covers between the triple trees and push the fork pipes into their origin position.

Tighten the clamping screws according to the manufacture instructions.

The Thunderbike team wishes you fun with your new parts.
Have a nice and safe ride!

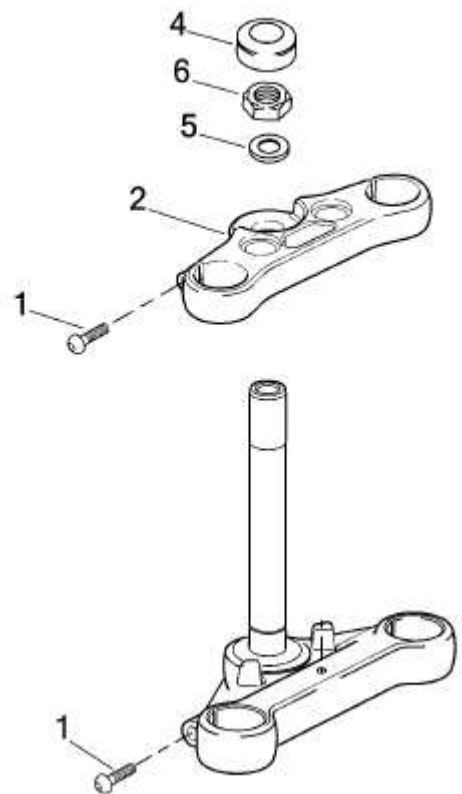

Thunderbike
Güterstrasse 5
D-46499 Hamminkeln
Telefon (0049) 2852 - 6777 - 33
Telefax (0049) 2852 - 5444
info@thunderbike.de