

**BUGSPOILER „TB-R“
FÜR HARLEY-DAVIDSON SOFTAIL (-2017)**



LIEFERUMFANG:


- 1 GFK-Bugspoiler
- 2 Distanzhülse 17mm
- 1 Halter VA
- 2 Inbusschraube UNC 1/4
- 4 Linsenkopfschraube M6x20mm
- 2 Scheibe
- 1 Schaumstoff, selbstklebend
- 1 Teile-Gutachten
- 1 Kennzeichnungs-Aufkleber

MONTAGEANLEITUNG:


- Lösen Sie die beiden Schrauben am Lichtmaschinenregler.



- Demontieren Sie die rechte Fußrasteneinheit.

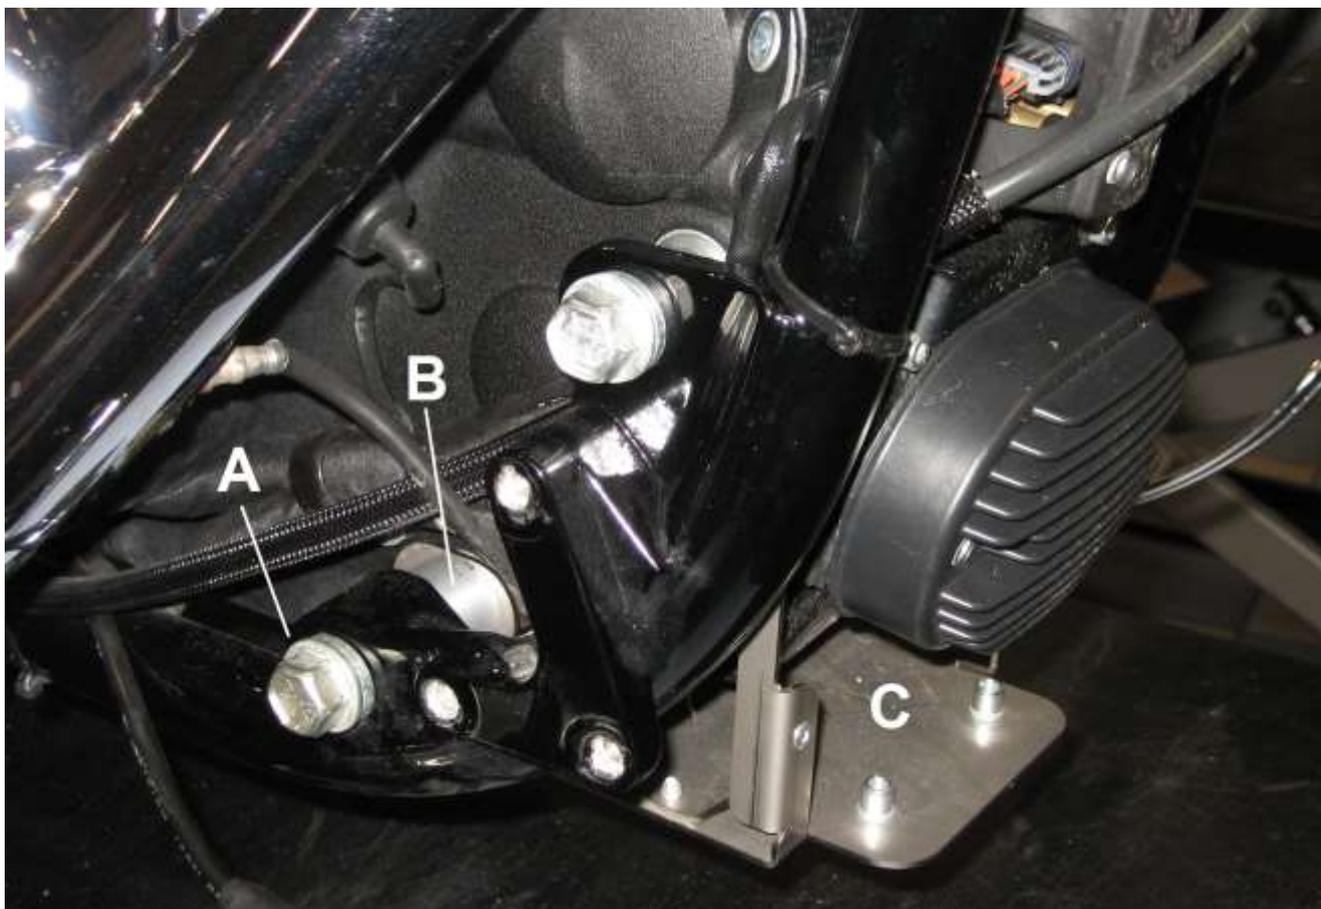

- Bringen Sie den Halter (C) so am Lichtmaschinenregler an, dass die Laschen des Halters an der hintersten (motornächsten) Position sind. Benutzen Sie dabei die mitgelieferten Inbusschrauben.
- Lösen Sie den Motorhalterbolzen (A) und befestigen Sie mit ihm die anderen Laschen des Halters (C). Ersetzen Sie dabei die originalen Hülsen durch die mitgelieferten 17mm-Distanzhülsen (B).

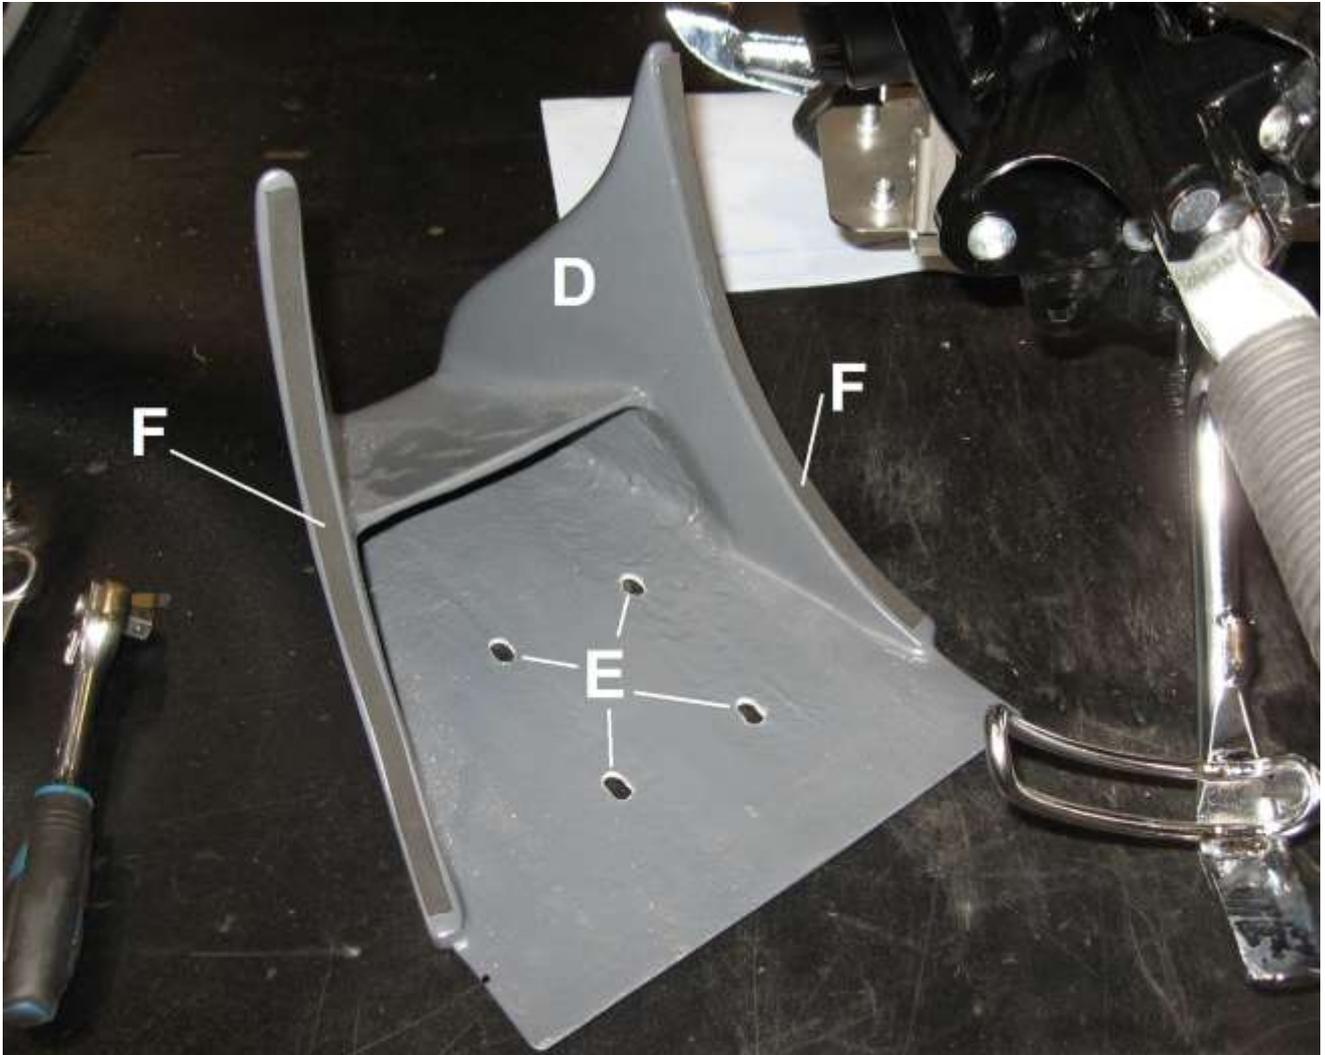

- Bringen Sie den Bugspoiler (D) mit den Linsenkopfschrauben probeweise am Halter an. Ist der Bugspoiler zu nah oder zu fern am Rahmen, können Sie die Bohrungen (E) zu Langlöchern aufteilen bis die Position stimmt.
- Erst jetzt sollte der Bugspoiler lackiert werden!
- Montieren Sie den Bugspoiler endgültig, kleben Sie zuvor den Schaumstoff (F) zum Schutz des Lacks an den Bugspoiler.
- Bringen Sie den Kennzeichnungs-Aufkleber so an, dass er für den Sachverständigen, beim Eintrag in die Fahrzeug-Papiere, lesbar ist.
- Montieren Sie die Fussrasteneinheit wieder am Rahmen.
- Überprüfen Sie die Verschraubungen nach der endgültigen Montage und nach der ersten Probefahrt!

**Das Thunderbike-Team wünscht viel Vergnügen.
Gute Fahrt!**



Thunderbike
Güterstrasse 5
D-46499 Hamminkeln
Telefon(0049)2852 - 6777 -33
Telefax (0049)2852 - 5444
info@thunderbike.de

CHIN FAIRING “TB-R”
FOR HARLEY-DAVIDSON SOFTAIL (2000-2017)



PACKING LIST:


- | | |
|---|--------------------------|
| 1 | Fiberglass chin fairing |
| 2 | Bearing 17mm |
| 1 | Bracket |
| 2 | Allen head screw UNC 1/4 |
| 4 | Lens head screw M6x20mm |
| 2 | Washer |
| 1 | Cellular tape |
| 1 | TÜV certification |
| 1 | Label |

INSTALLATION INSTRUCTONS:


- Loose the two screws at voltage regulator.



- Remove the right footrest unit.

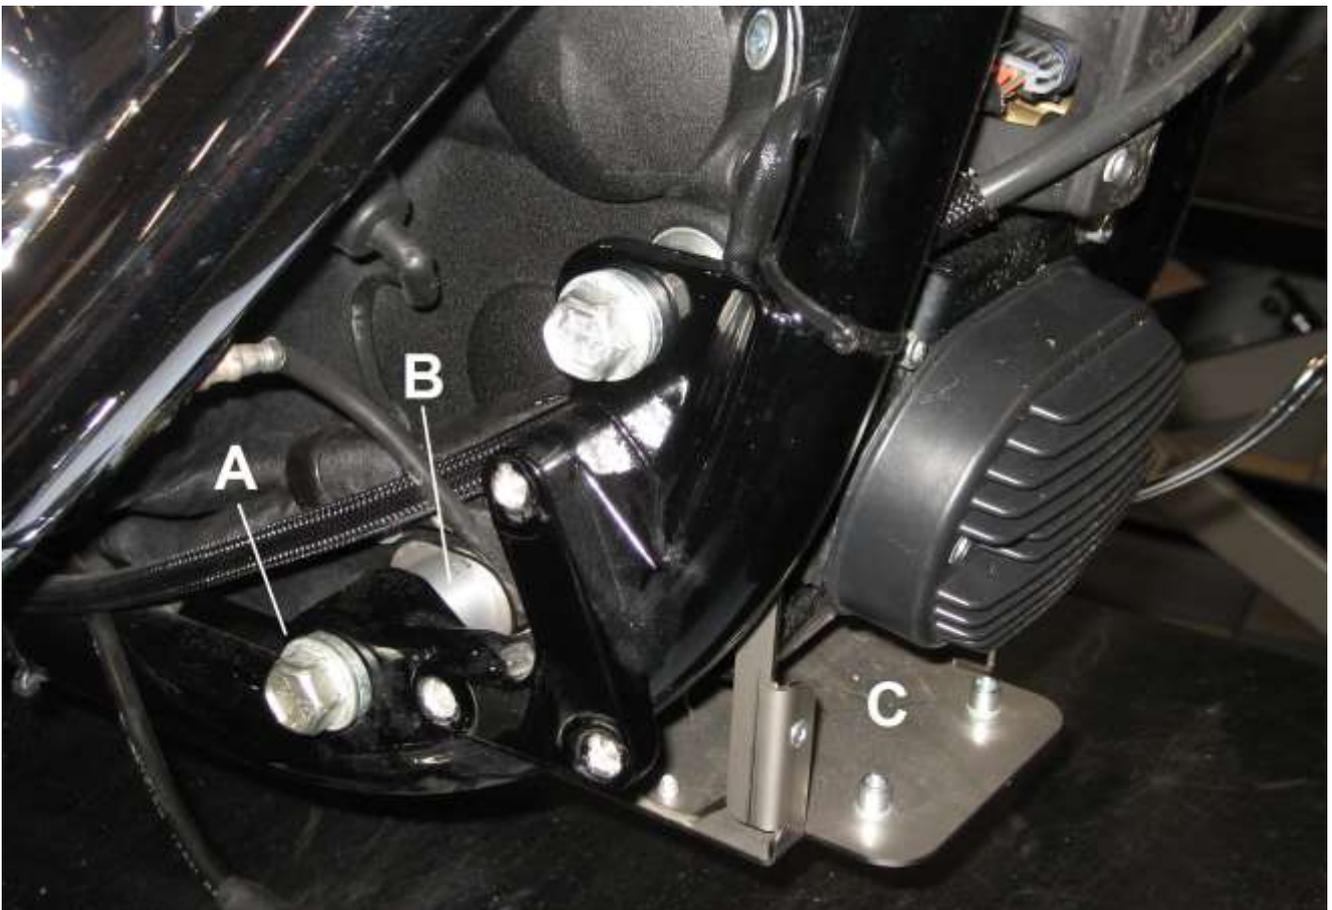

- Mount the bracket (C) to the voltage regulator. Make sure the bracket is the next part towards the engine. Use the new Allen screws here.
- Loose the engine bolt (A) and mount the bracket (C) with it also. Replace the OEM bearings with the new 17mm parts.

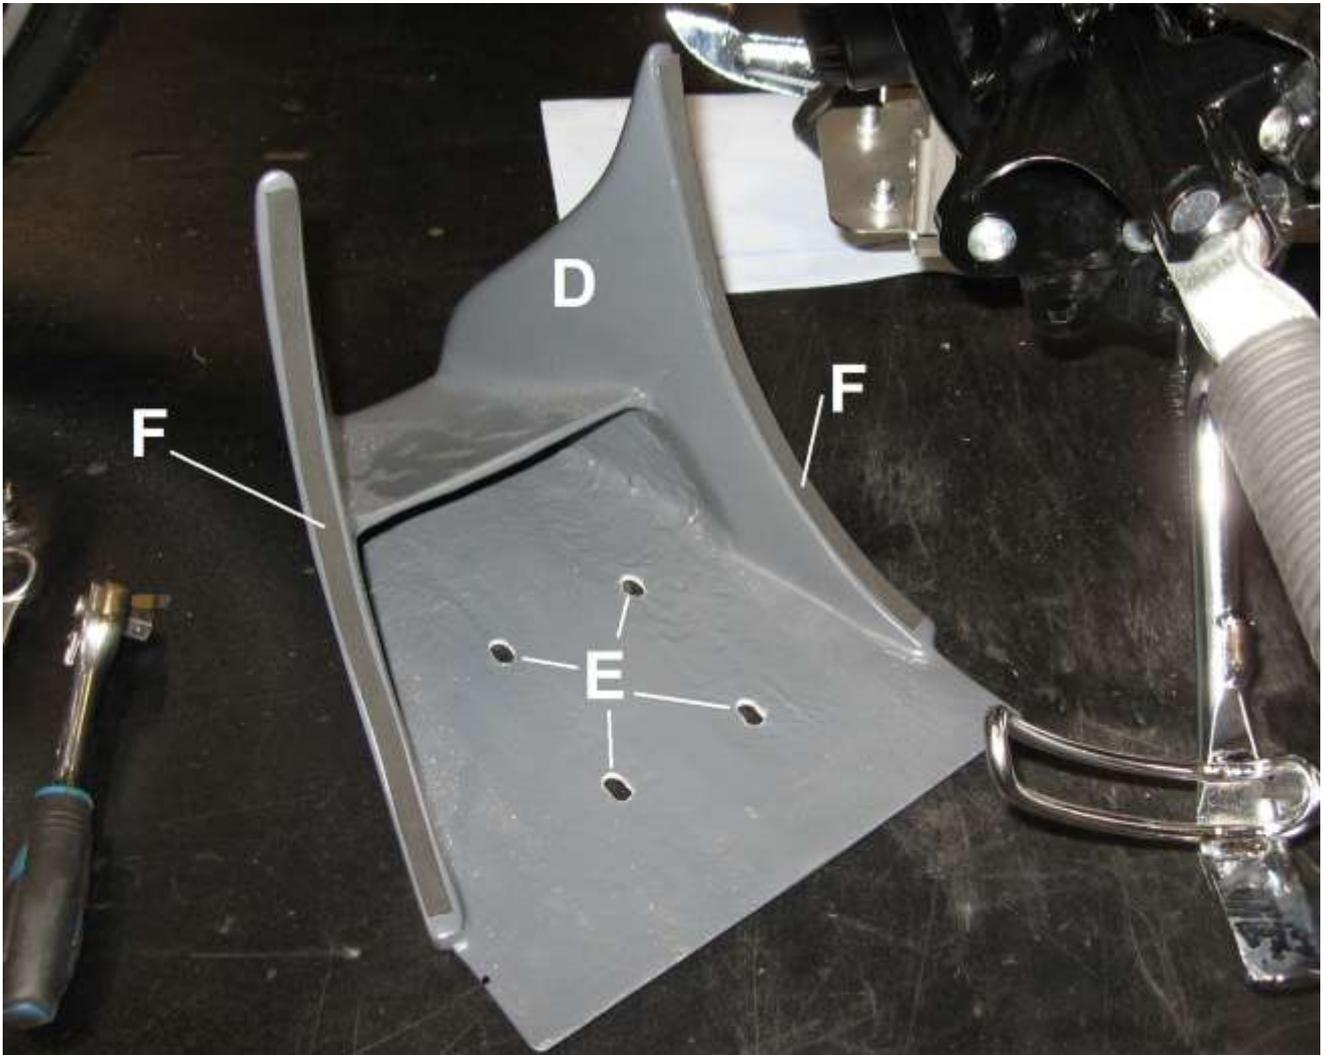

- Install the chin fairing (D) for test purposes to the bracket. If the fairings position is too near or too far to frame you can rasp the holes (E) to slots until the position is right.
- If everything fits perfect you can paint the chin fairing.
- Stick the cellular tape (F) for paint protection inside the chin fairing and install the fairing finally.
- Stick the label onto a visible position to fairing.
- Install the right footrest unit again.
- Just a reminder to check once again all nuts and bolts are secure!

The Thunderbike team would like you to be careful when riding with your new chin fairing. We wish you both safety and fun.

The Thunderbike team wished you both safety and fun with your new parts.
Have a nice ride!



Thunderbike
Güterstrasse 5
D-46499 Hamminkeln
Telefon(0049)2852 - 6777 -33
Telefax (0049)2852 - 5444
info@thunderbike.de