MONTAGE-KIT SOLOSITZ

FÜR HARLEY-DAVIDSON SOFTAIL (2000-2017)

THUNDERBIKE
Since 1985
CUSTOMS

MONTAGEANLEITUNG:

Bauen Sie den Originalsitz ab.

Montieren Sie die Halterung des Sitzscharniers (1) mit den Originalschrauben am Rahmen.
Hinweis: **In Verbindung mit dem TB-Alu-Tank dient das Sitzscharnier als Tankhalterung.**

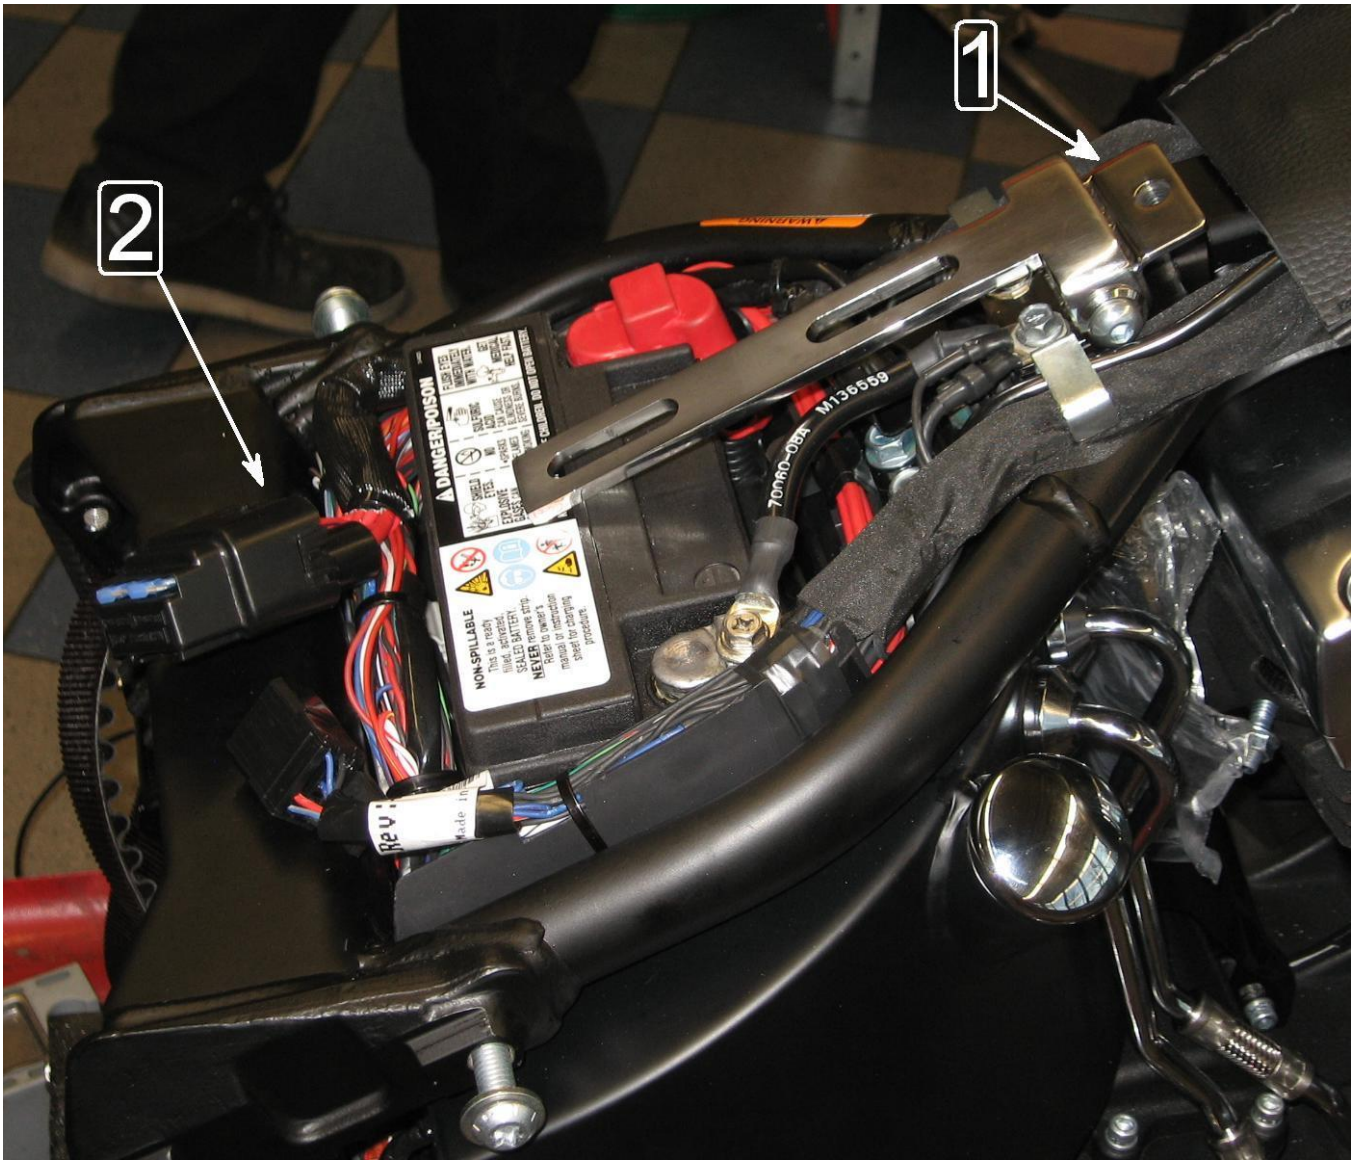

Bauen Sie die Batterie aus, entfernen Sie die Kunststoffbox komplett und setzen Sie die Batterie wieder ein.

Schieben Sie das ECM (2) nun in den Spalt hinter der Batterie und platzieren Sie die Sicherungsbox so, dass sie unter die Abdeckplatte passt.

Schieben Sie die beiden Laschen der Abdeckplatte (3) unter die Halterung und drücken Sie den hinteren Teil der Abdeckplatte auf den Rahmen.

Markieren Sie die beiden Bohrungen (4) der Abdeckplatte am Rahmen, bohren Sie hier zwei Löcher Ø 6,5mm und schneiden Sie M8-Gewinde hinein.

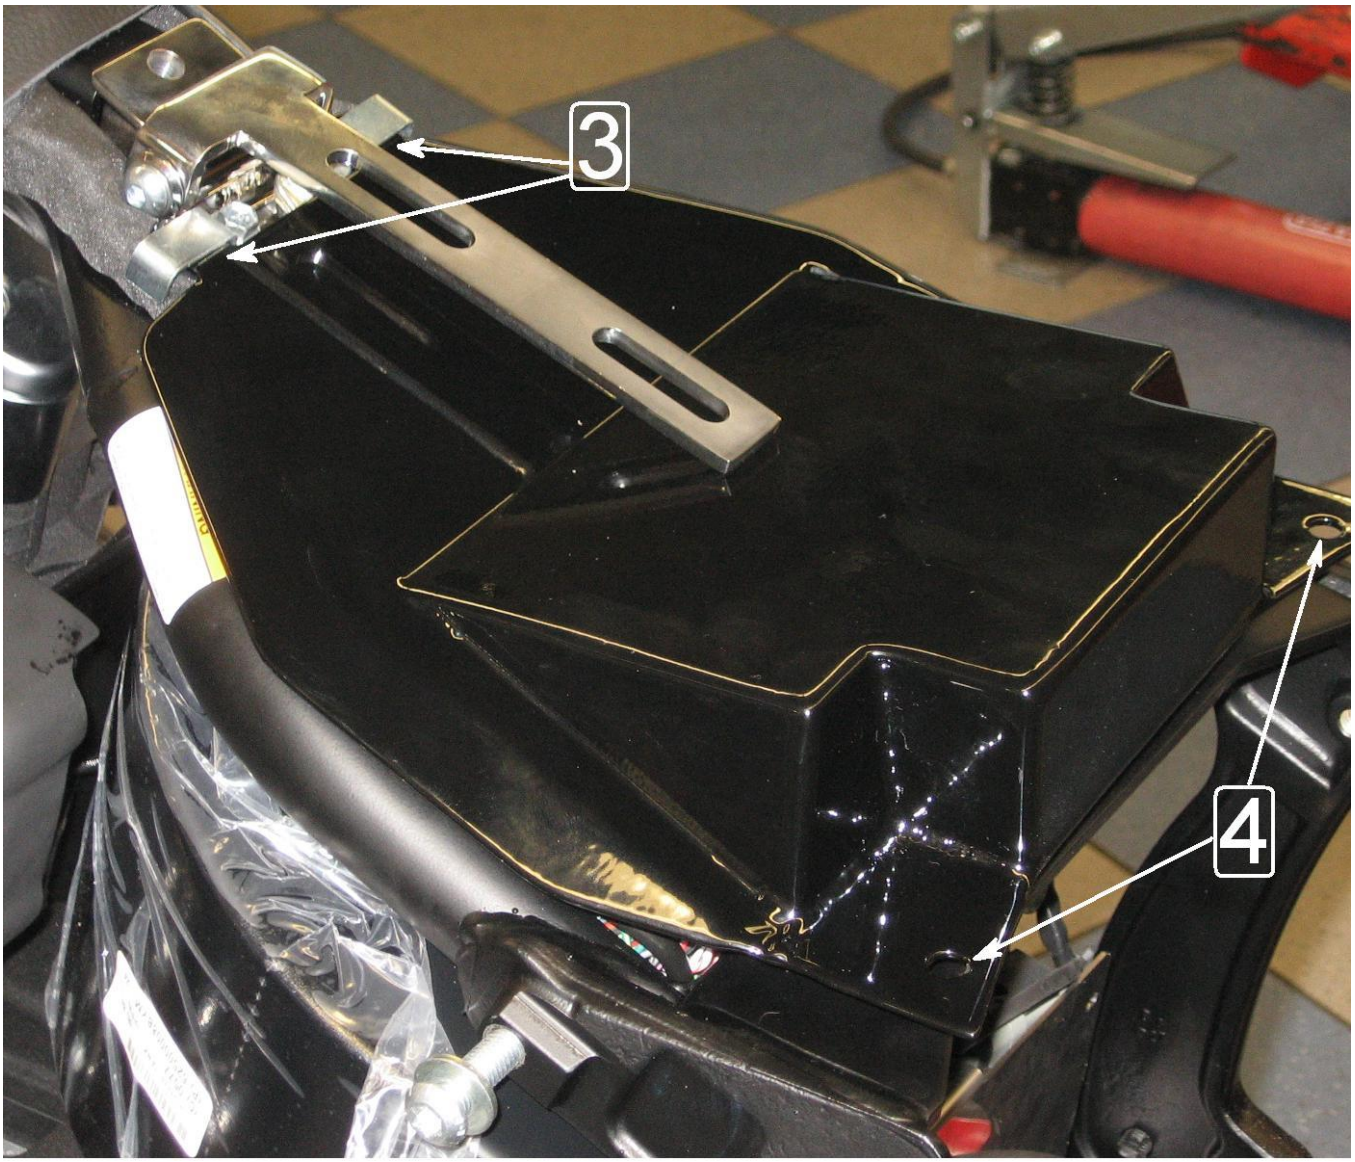

Schieben Sie die Käfigmutter in die Schiene des Einzelsitzes und schrauben Sie die Vorderseite des Sitzes locker an das Sitzscharniers.

Schrauben Sie die Sitzfedern zusammen mit der Abdeckplatte an den Rahmen.

Befestigen Sie den Sitz endgültig am Sitzscharnier und an den Sitzfedern.

Das Thunderbike-Team wünscht viel Vergnügen

Thunderbike
Güterstrasse 5
D-46499 Hamminkeln
Telefon (0049) 2852 - 6777 -33
Telefax (0049) 2852 - 5444
info@thunderbike.de

SOLO SEAT BRACKET

FOR HARLEY-DAVIDSON SOFTAIL (2000-2017)

THUNDERBIKE
Since 1985
CUSTOMS

INSTALLATION INSTRUCTIONS:

Remove the OEM seat.

Install the new frame joint (1) to the frame using the oem screws.
Attention: When using our TB strechted fueltank the new frame joint works as fuel tank mounting point.

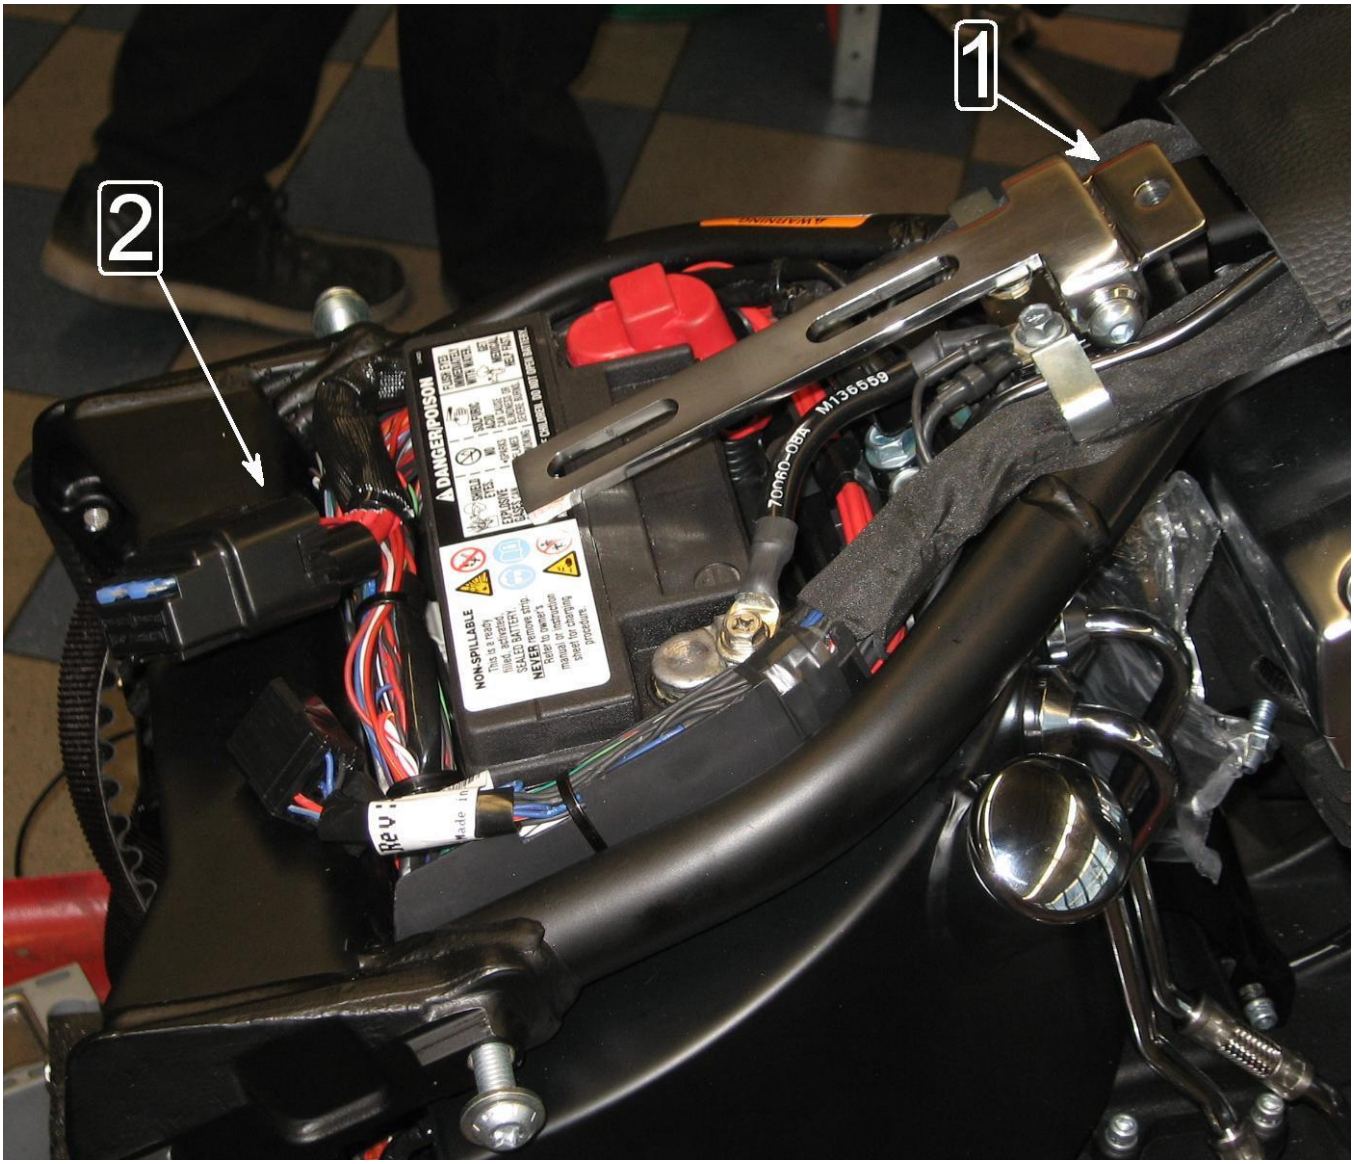

Remove the battery, then remove the complete plastic box and mount the battery again.

Push the ECM (2) in free room behind the battery and relocate the fuse box that way it will fit under the new frame cover.

Push the two flaps of the frame cover (3) under the frame joint.
Push down the rear part of the frame cover.

Mark the positions of the two holes (4) to the frame. Drill there holes of 6.5mm diameter and thread M8 threads in it.

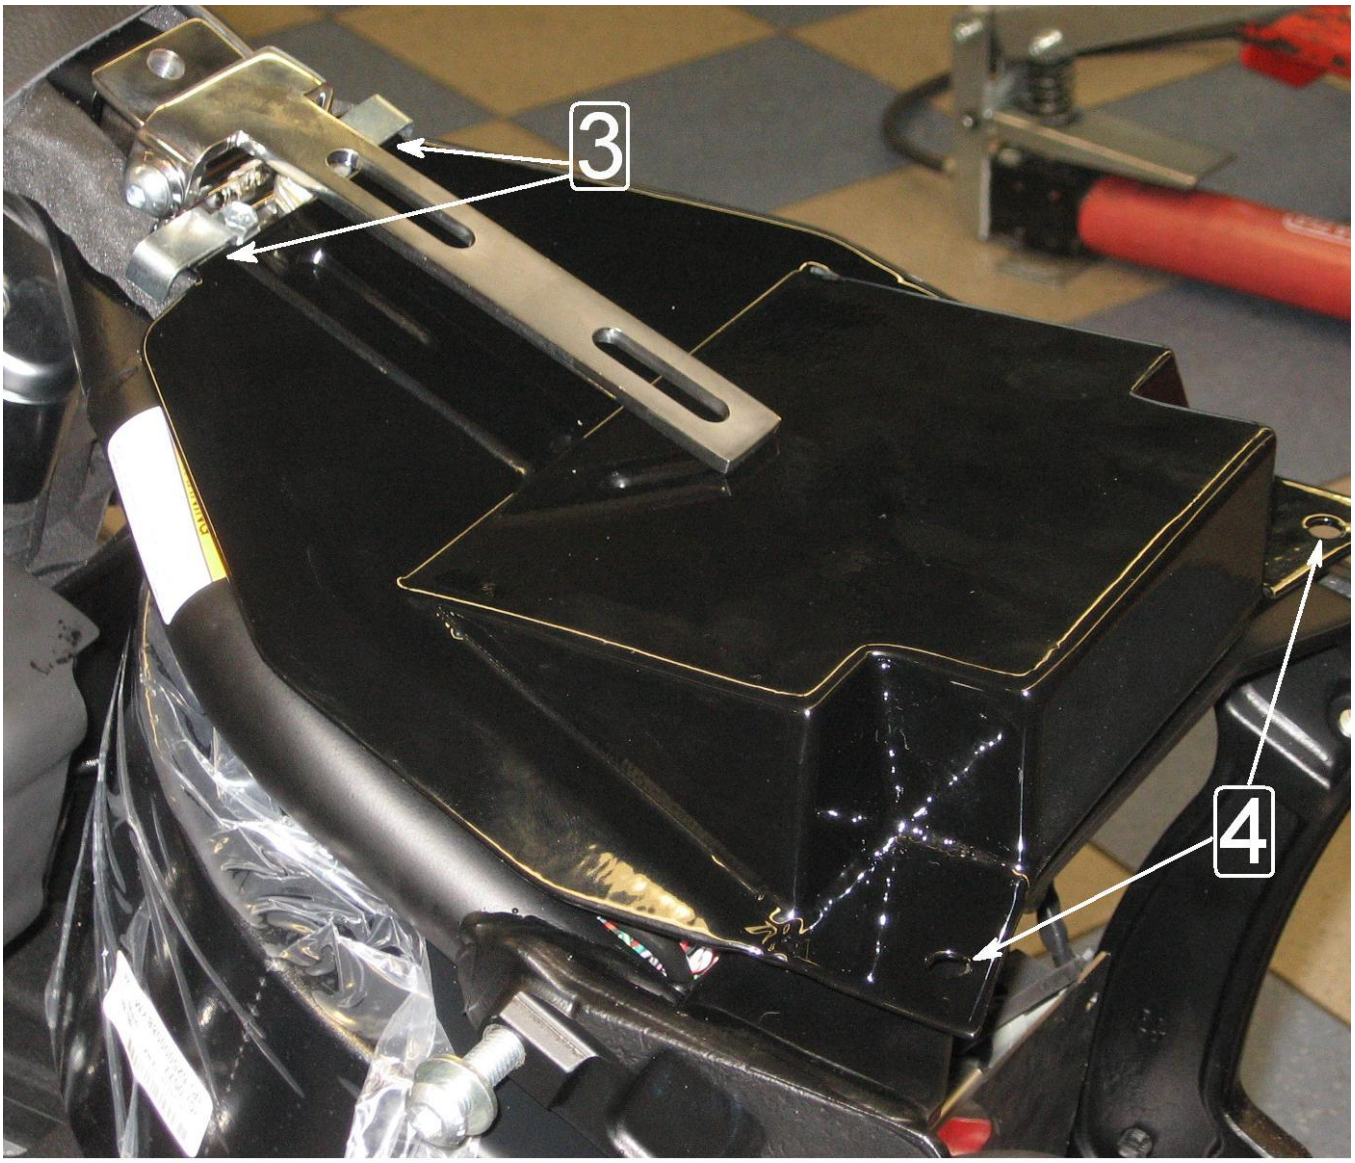

Push the square nut into the rack downside your seat. Mount the front part of the seat to the frame joint, loosely.

Install the seat spring together with the frame cover to the frame.

Mount the seat finally to the frame joint and the springs.

Have fun with it!

Thunderbike
Güterstrasse 5
D-46499 Hamminkeln
Telefon (0049) 2852 - 6777 -33
Telefax (0049) 2852 - 5444
info@thunderbike.de